NEW WINDOWS AND TRANSOMS IN EXISTING OPENINGS TO MATCH ORIGINAL WOOD-FRAMED STOREFRONT.

NEW WINDOWS AND TRANSOMS IN EXISTING OPENINGS TO MATCH ORIGINAL WOOD-FRAMED STOREFRONT. CENTER (2) WINDOWS REPLACED BY DOUBLE ENTRANCE DOORS.

CLOSET 105

WOMEN'S RR 104

UP

7 A300

SEE A301 FOR RESTROOM DETAILS

FIRE EXTINGUISHER

FIRE EXTINGUISHER

REMOVE BLOCK INFILL IN EXISTING OPENING AND INSTALL NEW WINDOW.

NEW WINDOWS AND TRANSOMS IN EXISTING OPENINGS TO MATCH ORIGINAL WOOD-FRAMED STOREFRONT.

REMOVE BLOCK INFILL IN EXISTING OPENING AND INSTALL NEW WINDOW.

STORAGE 101

STORAGE 107

REMOVE BLOCK INFILL IN EXISTING OPENING AND INSTALL NEW WINDOW.

LOBBY 108

MEN'S RR 106

NEW INSET STOREFRONT FRAMING, DOOR, AND GLAZING TO MATCH ORIGINAL WOOD-FRAMED ENTRANCE.

DN

SEE A301 FOR RESTROOM DETAILS

UP

FIRE EXTINGUISHER

NEW WINDOWS AND TRANSOMS IN EXISTING OPENINGS TO MATCH ORIGINAL WOOD-FRAMED STOREFRONT.

NEW ENTRANCE DOORS IN NEW OPENING.

3 A301

2 A300

SEE A301 FOR RESTROOM DETAILS

CLOSET 102

UNISEX RR 103

NEW WINDOW AND EGRESS DOOR IN NEW OPENINGS.

5'-4" 3'-0" 3'-4" 3'-8"

11'-6" 10'-0" 3'-8" 3'-4" 3'-11" 4'-8" 12'-3" 9'-8" 12'-2" 9'-10" 5'-8" 2'-0" 56'-6" 9'-4"

3 A300

NEW OVERHEAD DOOR AND EGRESS DOOR IN NEW OPENINGS.

4 A300

FIRE EXTINGUISHER

MECHANICAL 109

REMOVE BLOCK INFILL IN EXISTING OPENING AND INSTALL NEW WINDOW.

EXISTING DOOR TO REMAIN.

NEW WINDOWS IN NEW OPENINGS.

2 FIRST FLOOR PLAN

Scale: 1/8" = 1'-0"

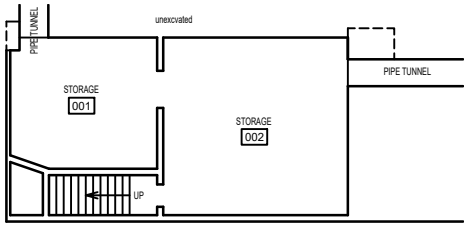

1 BASEMENT PLAN

Scale: 1/8" = 1'-0"